 
 


 
Setting and Calibration for Price Computing Scale UPA

1. Before the calibration, please make sure the scale is under the mode of 'dt on'.

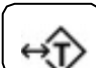
While you start the scale, press both the key  and the key  to select mode of 'dt on' and 'dt oF'.

 
Only under the mode of the 'dt on', the scale can enter the mode of setting and calibration.

If you turn to the mode of 'dt oF', the mode of setting and calibration will be locked.

2. Press and hold the key  while it is starting the power

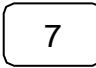

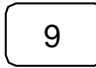
2.1 Press the key  to select digits of unit price.

2.2 Press the key  to select the way to input unit price.

 
2.3 Press the key  to select range of zero point.

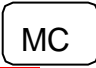
3. Calibration and setting

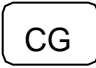
3.1 Press the key  to start the scale.

3.2 Press the password    continuously before the scale begins to do self-check.

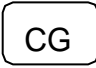
3.3 Until the weight window shows 'CAL--1', then,

Press the key  to move the cursor.

Press the key  to change the division and press the numerical key to input the capacity.

3.4 Press the key  to confirm and enter the next setting of weight calibration.

3.5 While the weight window shows 'CAL--2', please place the weight on the pan and input the value of weight by numerical key.

3.6 Press the key , and the weight window will show the value of the weight, then finish the calibration.